



LEICA Q2 / LEICA Q2 MONOCHROM

Firmware update

FIRMWARE 5.0

PHOTO

IMPROVEMENT

- Flash photography with Profoto devices was improved
- The focus/exposure setting will remain stored for the focus/exposure lock via the Zoom/Lock button (AF-L, AF-L + AE-L, AE-L) until the button is pressed again

PHOTO/VIDEO

NEW

- Firmware version numbers Q2 and Q2 Monochrom were aligned
- AF metering method Eye/Face allows the selection of an eye for primary focus

EXTENDED FUNCTIONALITY

- Optional direct access is now available to toggle between photo and video mode
- AF mode (AFs/AFc) for photo and video mode can now be set separately and permanently

ERROR CORRECTION

- Various errors in the firmware were fixed

FIRMWARE UPDATES

Leica is continuously working on the further improvement and optimization of your camera. Since many camera functions are entirely controlled by software, some of these improvements and additions to the functional scope can be installed in retrospect. Leica offers firmware updates at irregular intervals, which you can download from our website.

Leica will notify you of any new updates, once you have registered your camera.

There are two options for installing firmware updates.

- conveniently via the Leica FOTOS app
- directly via the camera menu

Finding the currently installed firmware version

- ▶ Select **Camera Information** in the main menu
 - The current firmware versions are displayed.

More information about registering, firmware updates and how to download them to your camera, as well as any amendments and additions to this manual can be found in the customer area of our website at:

<https://club.leica-camera.com>

EXECUTING A FIRMWARE UPDATE

Any interruption of a running firmware update may cause serious and irreparable damage to your equipment!

You will therefore have to take particular note of the following, when carrying out a firmware update:

- Do not switch off the camera!
- Do not remove the memory card!
- Do not remove the rechargeable battery!
- Do not detach the lens!

Notes

- A warning message will appear if the battery is insufficiently charged. Recharge the battery and then repeat the process described above.
- You will find additional device and country-specific registration marks and numbers in the **Camera Information** submenu.

PREPARATION

- ▶ Fully charge and insert the rechargeable battery
- ▶ Any stored firmware files on the memory card must be removed
 - We recommend saving any images on the memory card and reformatting it before the update.
(Caution: Loss of data! All data stored on the memory card will be lost during formatting.)
- ▶ Download the latest firmware version
- ▶ Save the download to the memory card
 - The firmware file must be stored in the main directory of the memory card (not in a sub-directory).
- ▶ Insert the memory card into the camera
- ▶ Switch the camera on

UPDATING THE CAMERA FIRMWARE

- ▶ Preparation
- ▶ Select **Camera Information** in the main menu
- ▶ Select **Firmware**
- ▶ Select **Start Update**
 - A prompt with information about the camera is displayed.
- ▶ Check the version information
- ▶ Select **Yes**
 - The prompt **Save profiles on SD Card?** appears.
- ▶ Select **Yes**
 - The update will start automatically.
 - The lower status LED will flash during this process.
 - Once the process has completed successfully, a relevant on-screen message and prompt to restart the device will appear on screen.
- ▶ Switch the camera off and on again



Note

- Date & time, as well as the preferred language will have to be set up again after the restart. Relevant prompts will appear on screen.

EYE DETECTION

FACE DETECTION


With this metering method, the Leica Q2 / Leica Q2 Monochrom detects faces in the frame automatically. The focus is set automatically on the faces closest to the camera. Should the head turn, then the camera will switch to field metering. Use the directional pad to select from the detected eyes and/or faces. Field metering is used if no faces are detected.

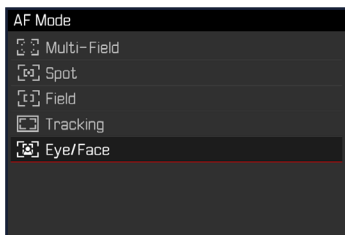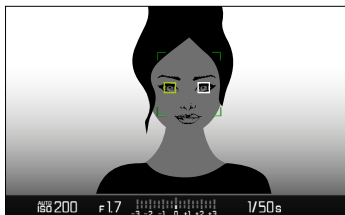

- ▶ Select **Focusing** in the main menu
- ▶ Select **AF Mode**
- ▶ Select **Eye/Face**

OPTIONAL SEPARATE SETTING FOR AF MODE (PHOTO/VIDEO)

AF mode can now be set individually for both operating modes (photo or video). This setting is easily accessible via the status screen.

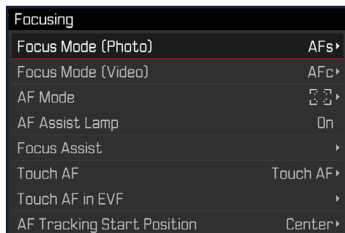

- ▶ Select **Focusing** in the main menu
- ▶ Select **Focus Mode (Photo)/Focus Mode (Video)**
- ▶ Select the desired setting

