

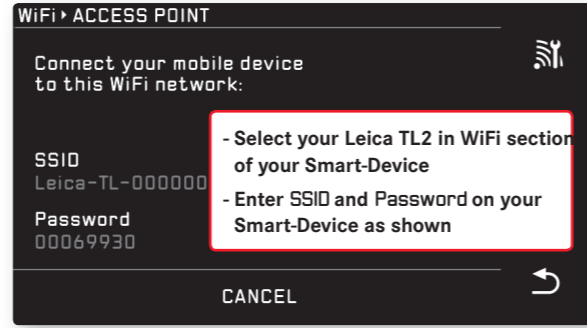
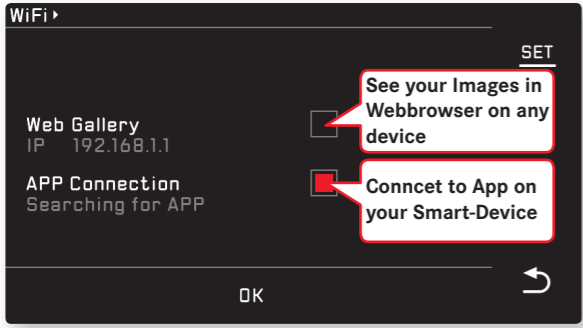






SETTING UP WIFI

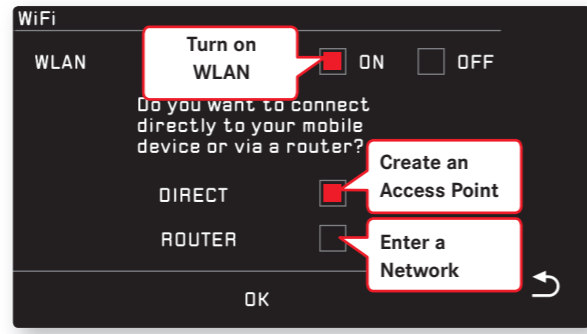




93570 VII/18/B

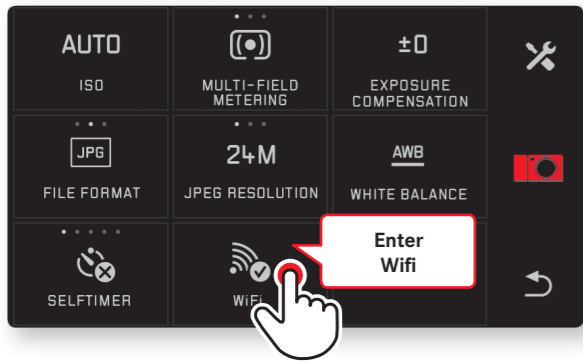




LEICA TL2 QUICK-START-GUIDE

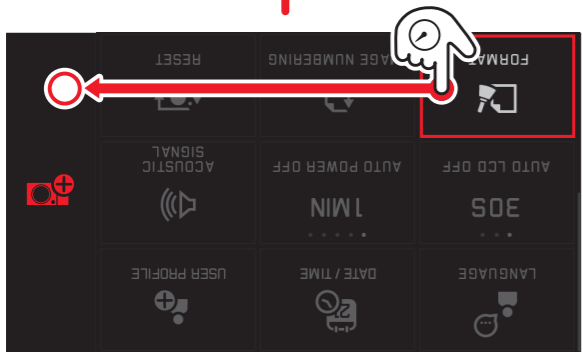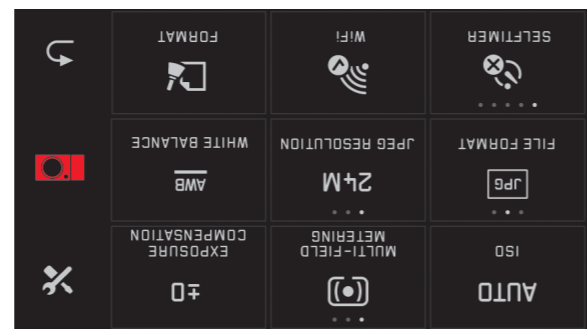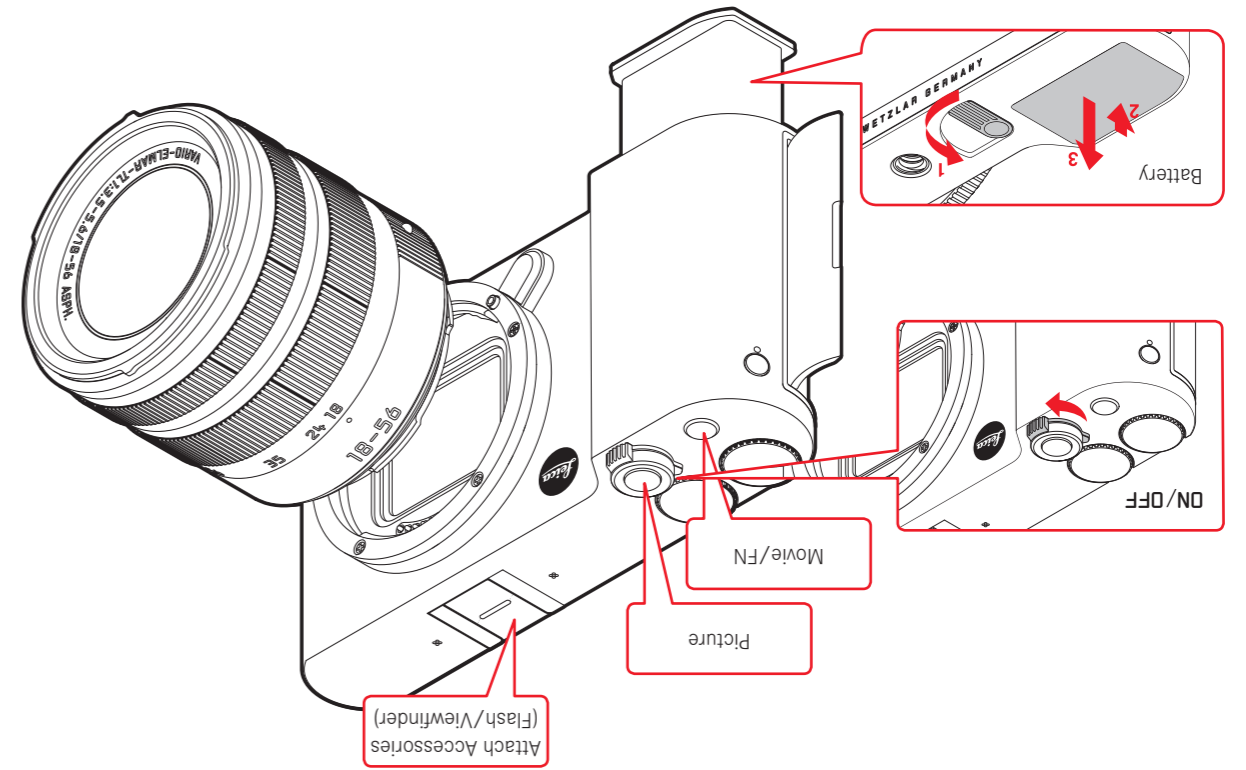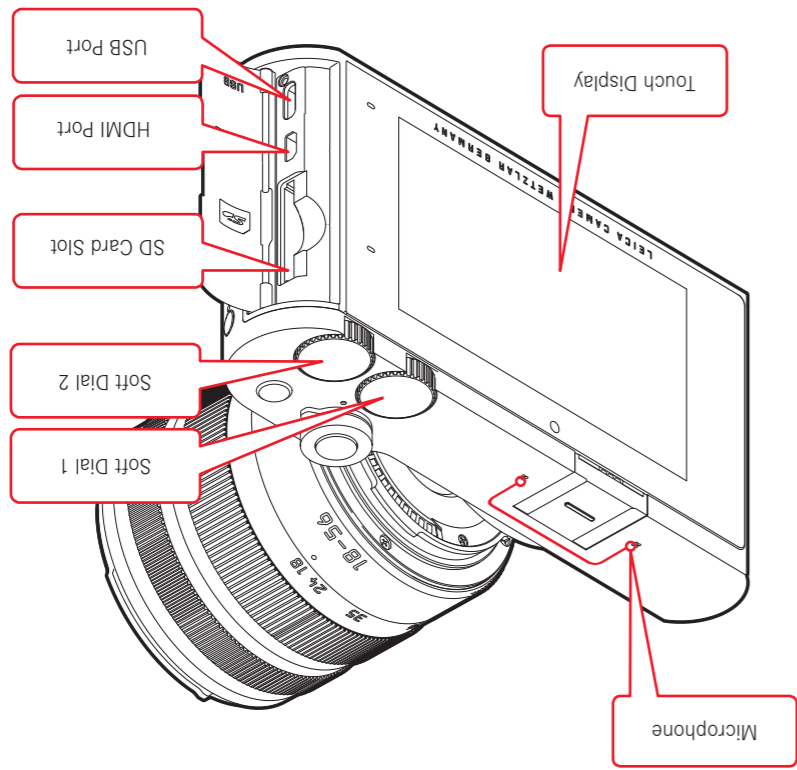

PERSONALIZE MY CAMERA MENU

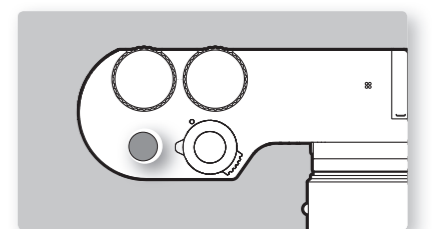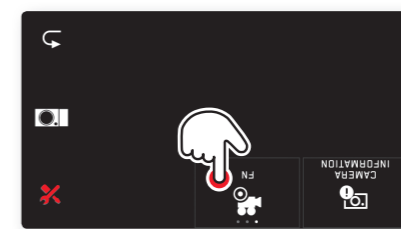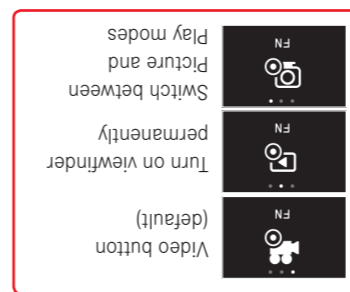


PERSONALIZE FUNCTION BUTTON

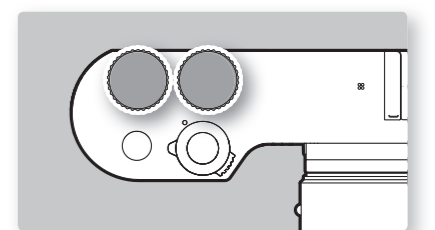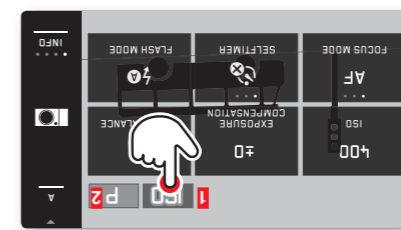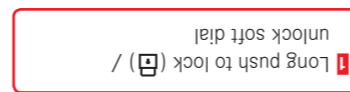


PERSONALIZE SOFT DIALS


SWITCHING BETWEEN PICTURE AND PLAY MODES

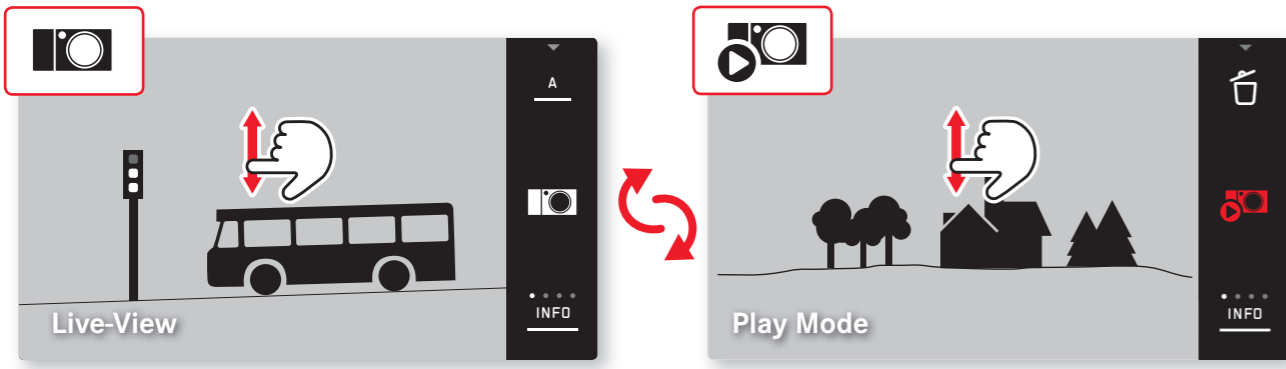



PLAY MODE FUNCTIONS

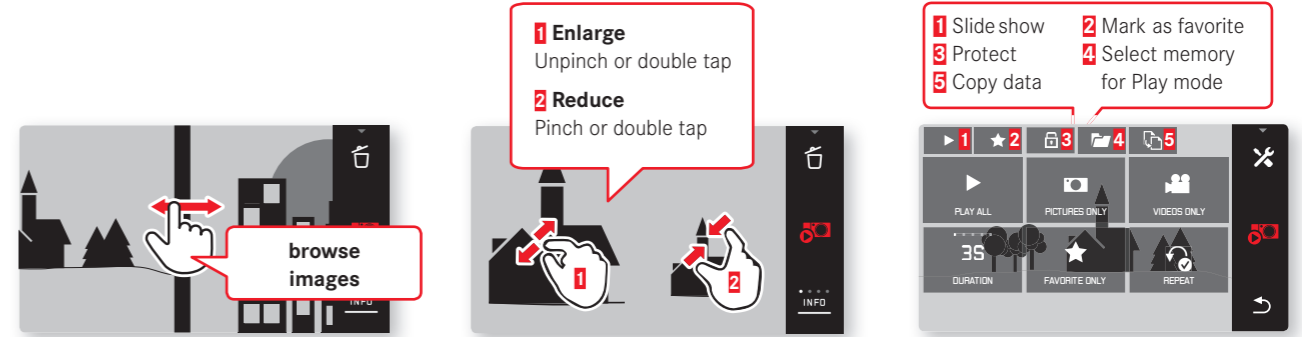


SWITCHING BETWEEN PICTURE AND VIDEO PREVIEW MODES

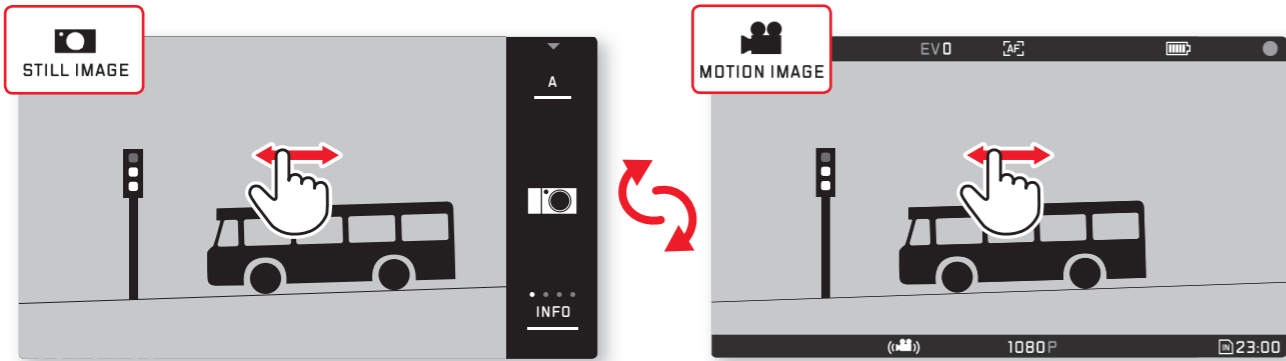

MENU FUNCTIONS

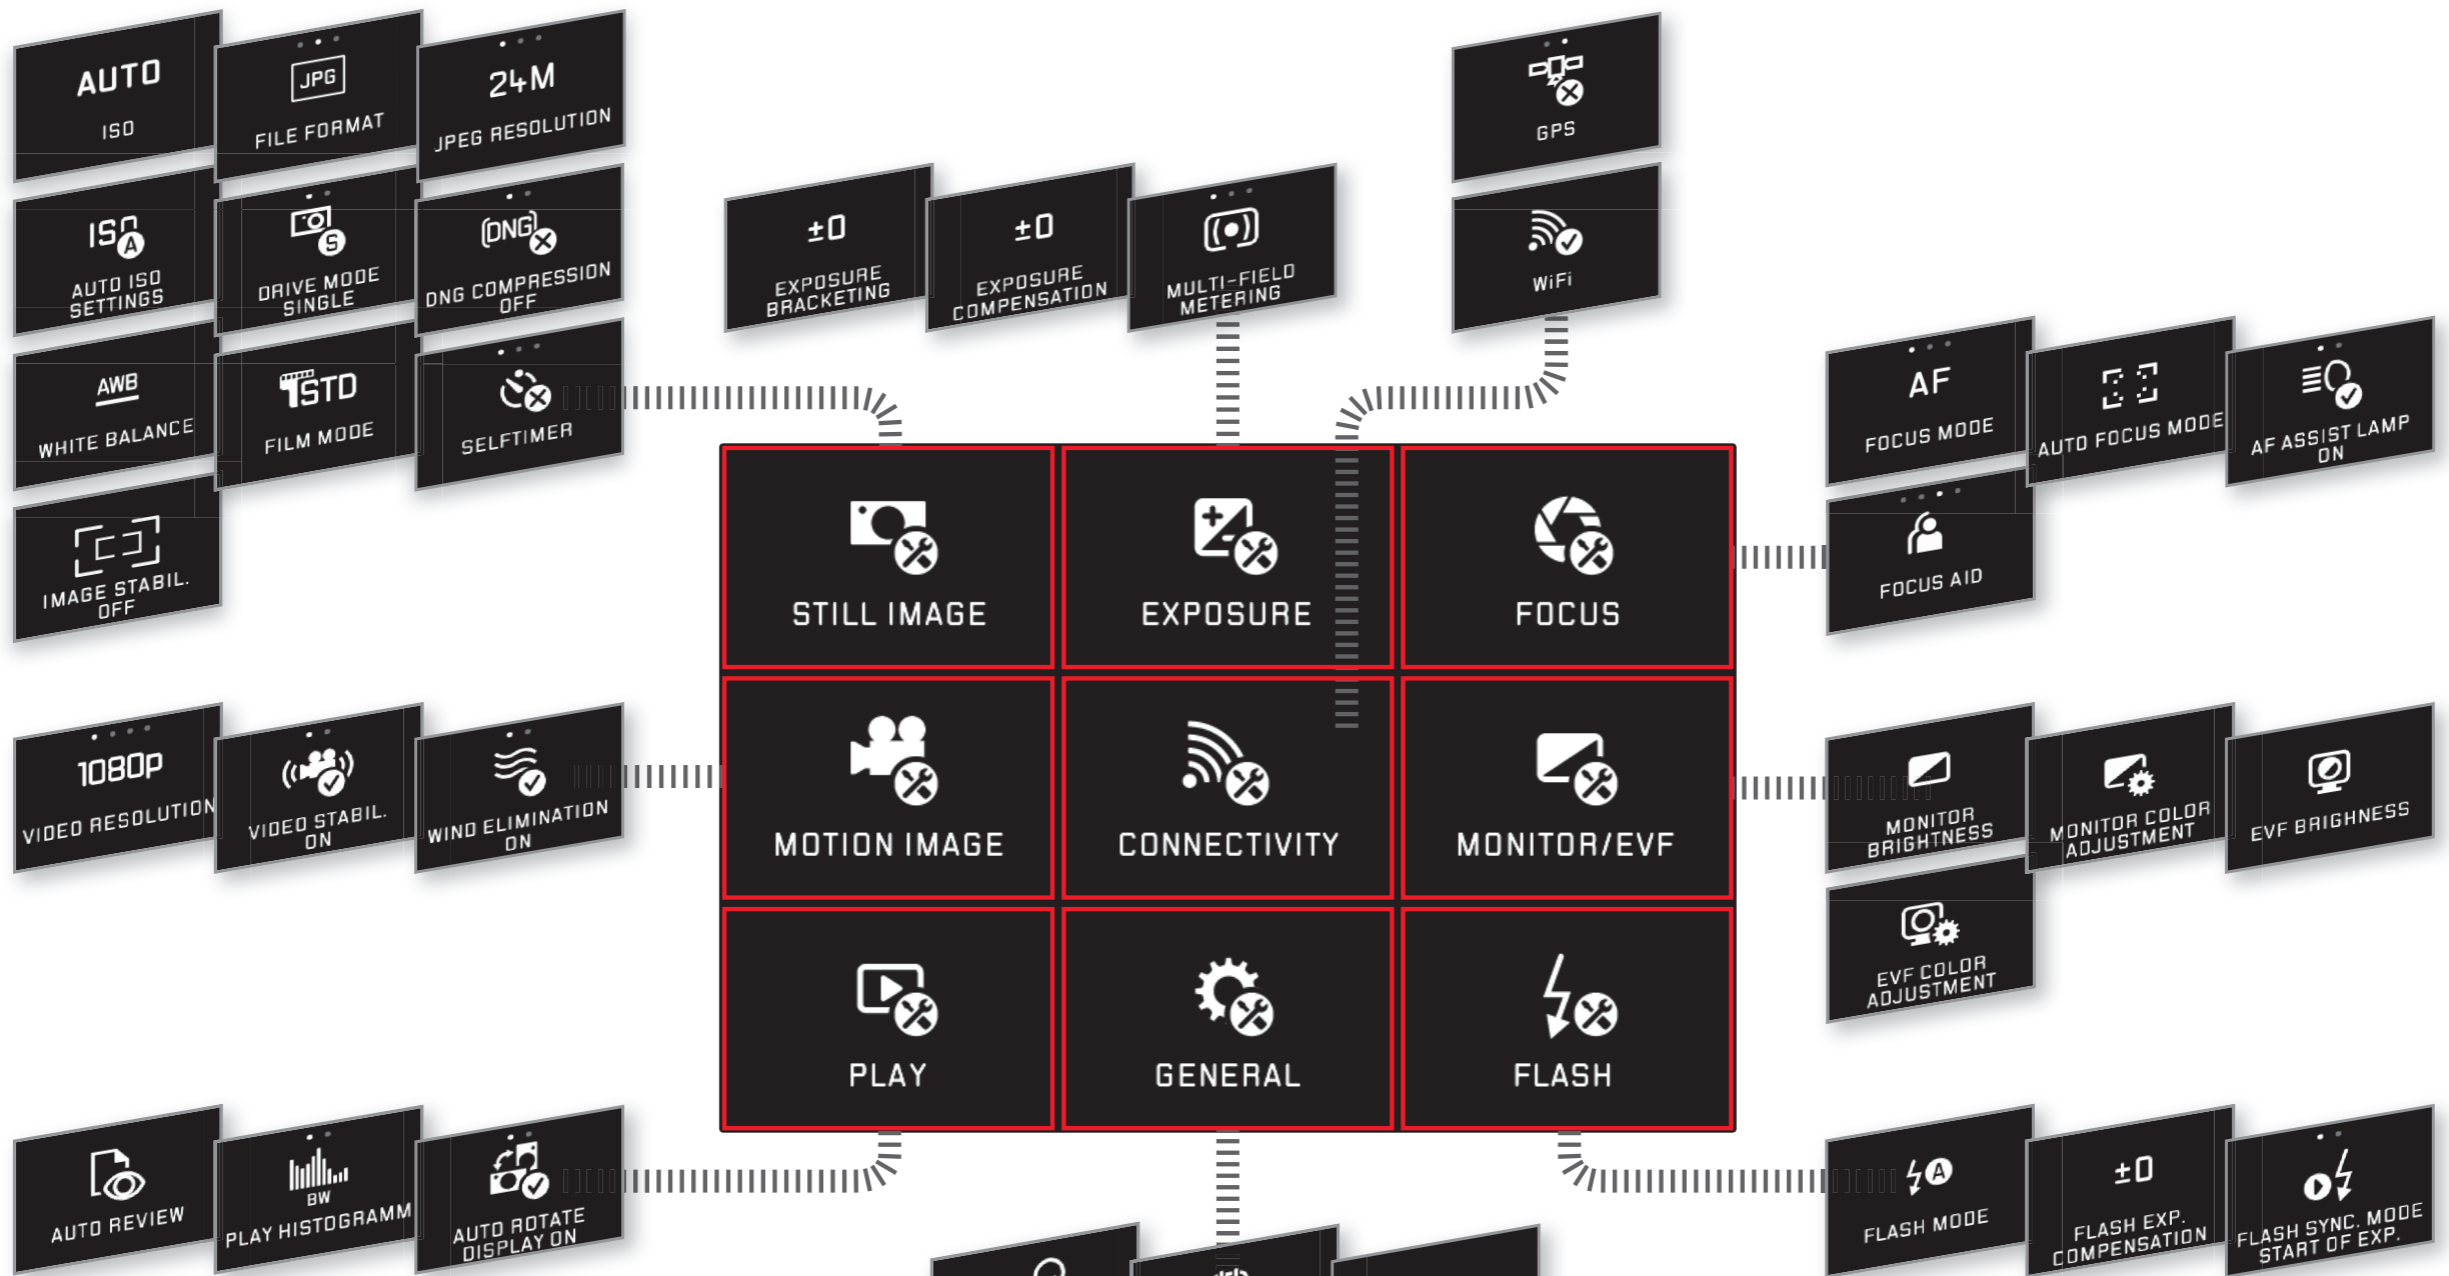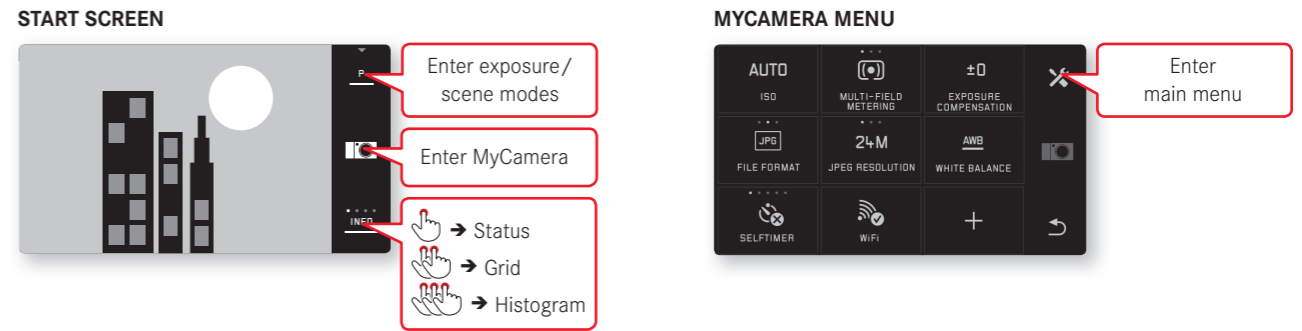

NAVIGATING IN MENUS

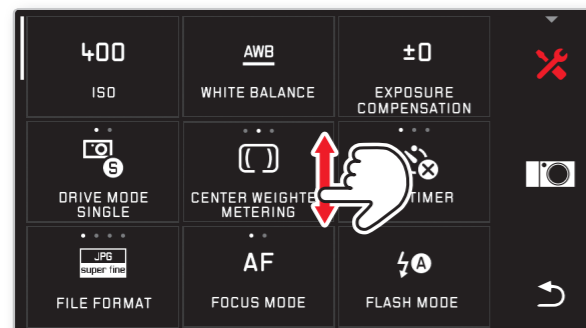

TOUCH TO ENTER A MENU ITEM'S SUBMENU/CHANGE SETTINGS

